


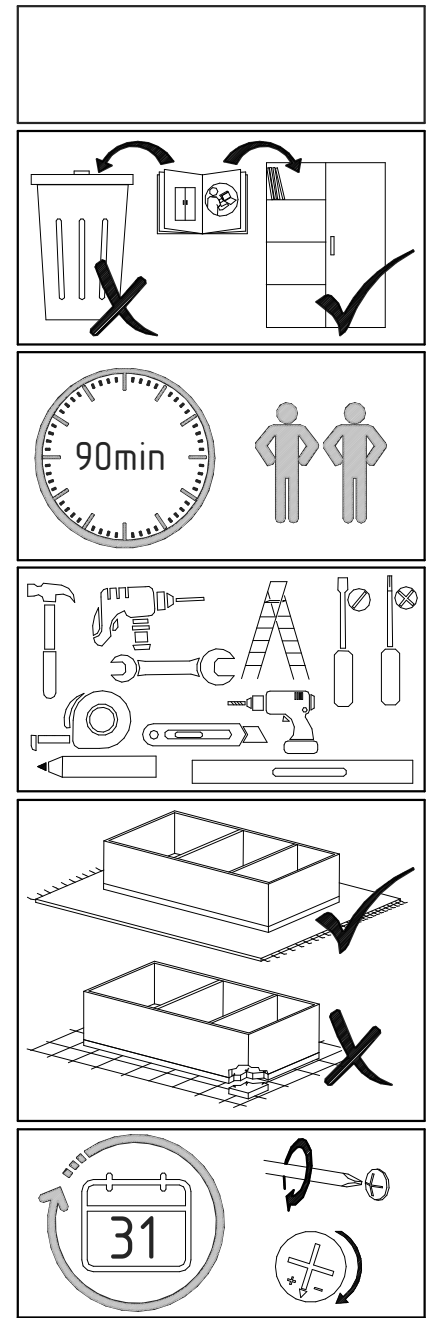
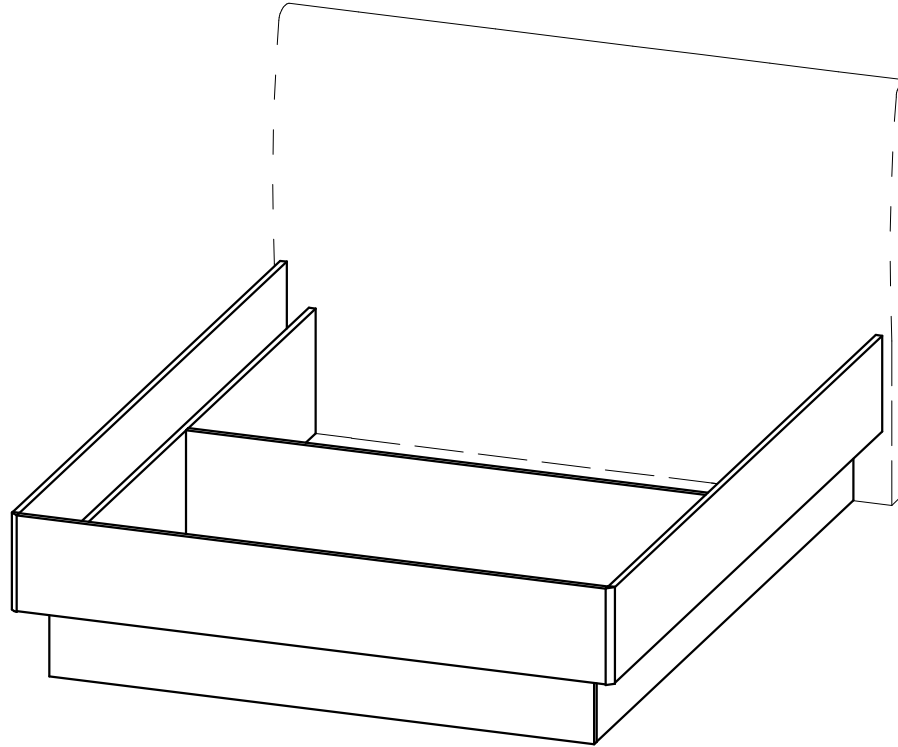


"Amber" 69.936 Основание кровати парящее 1,6


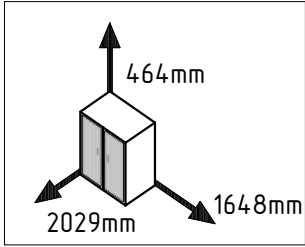


RU Инструкция по сборке

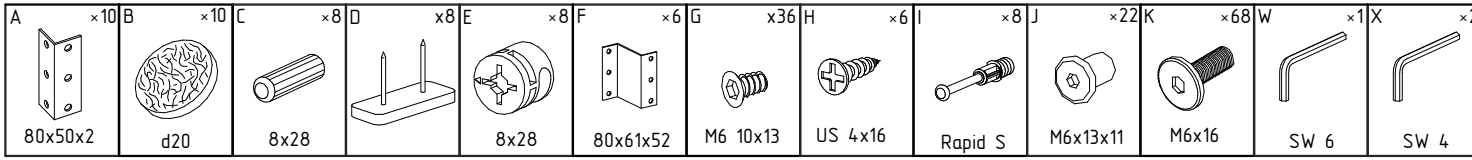





No				PSC	
1	2010	262	18	1	1/3
2	2010	262	18	1	1/3
3	1648	264	20	1	1/3
4	1931	342	18	1	2/3
5	1931	342	18	1	2/3
6	1490	342	18	1	2/3
7	1452	342	18	1	2/3

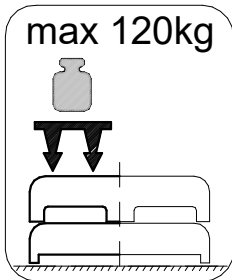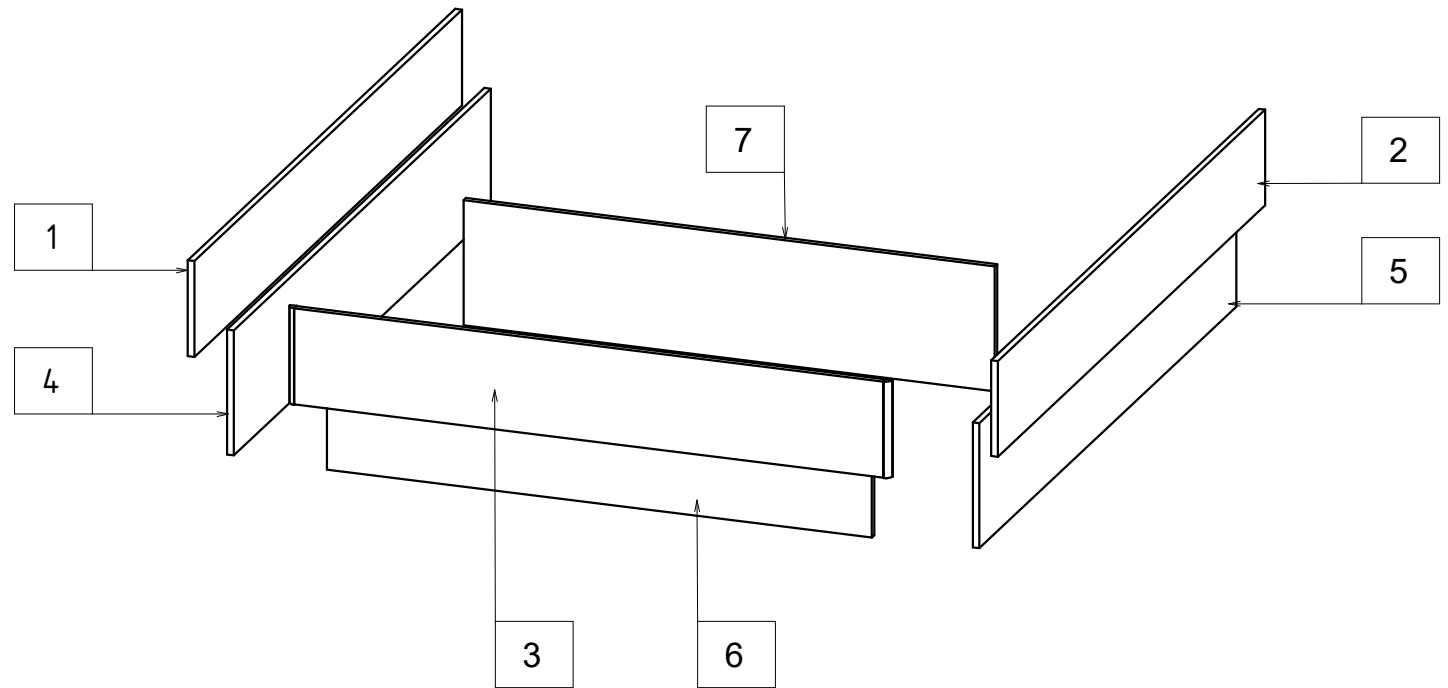


01

4 - 1
5 - 1

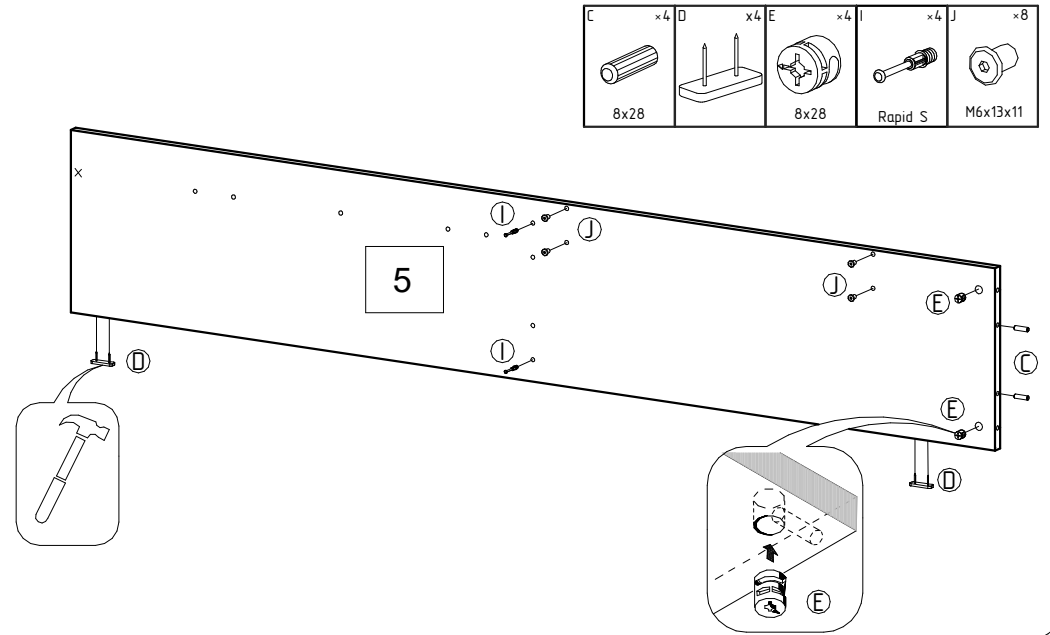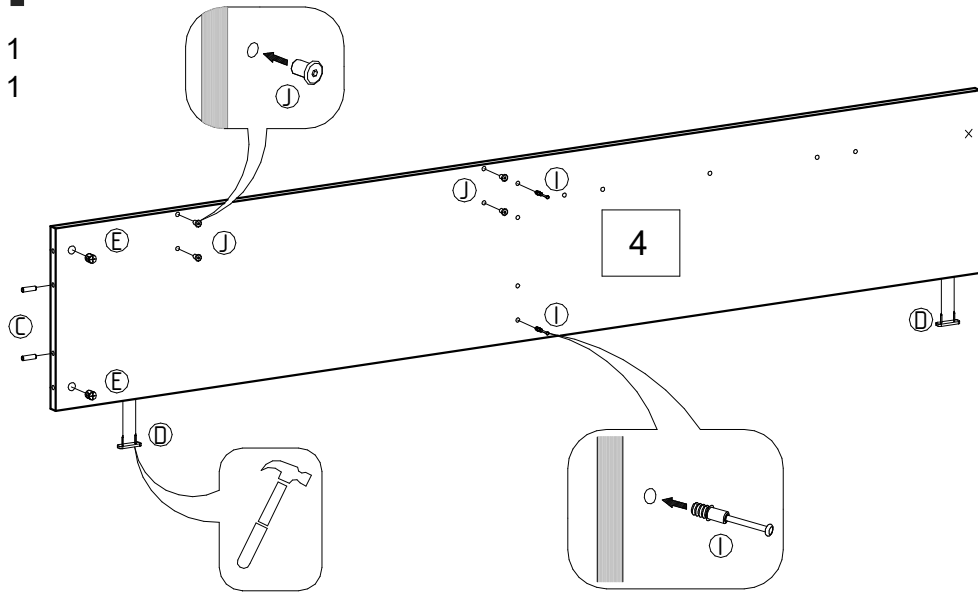


02

7 - 1

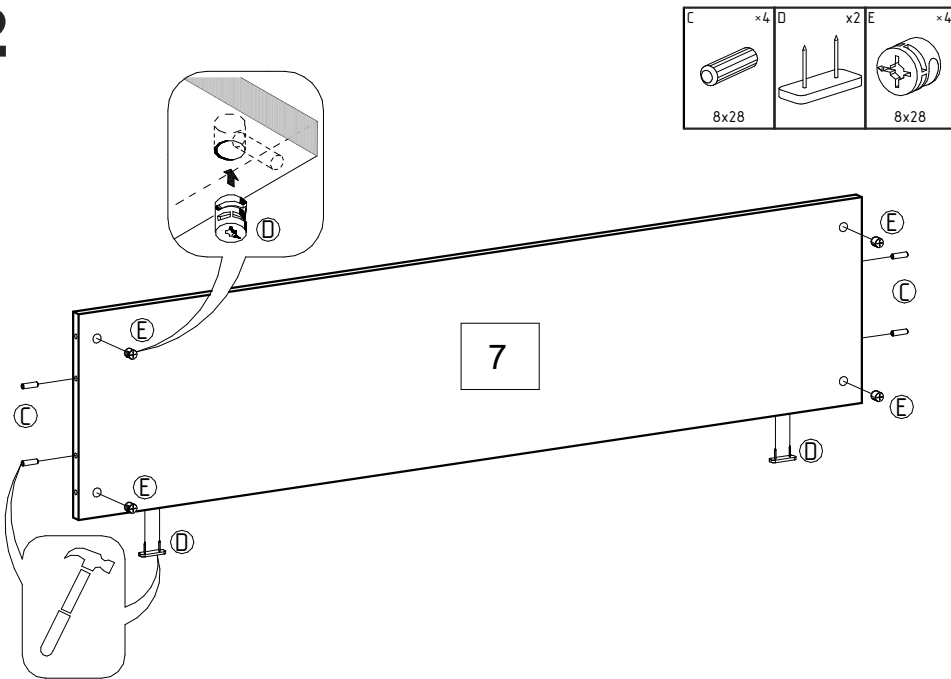


03

6 - 1

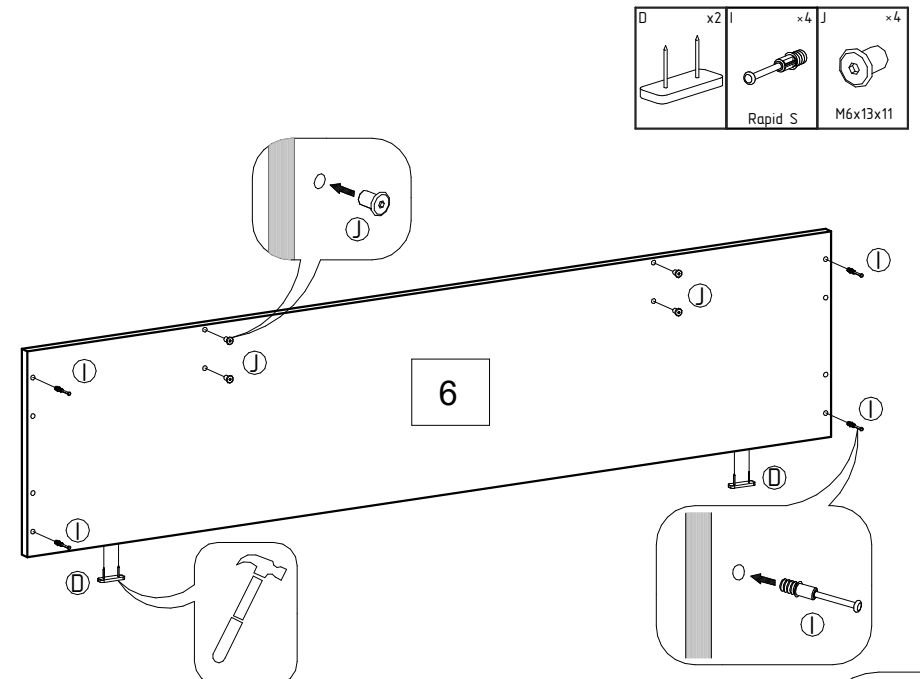


04








- 4** - 1
- 5** - 1
- 7** - 1

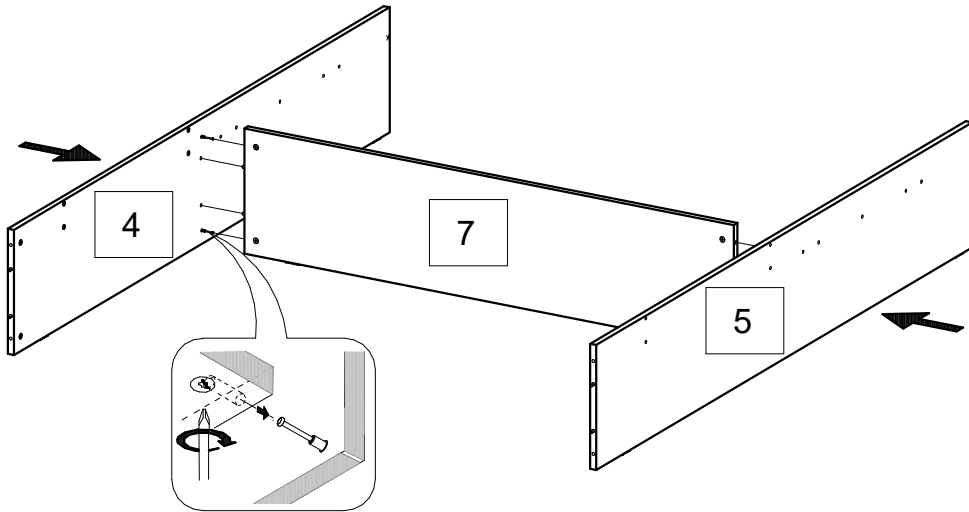**05**










- 6** - 1

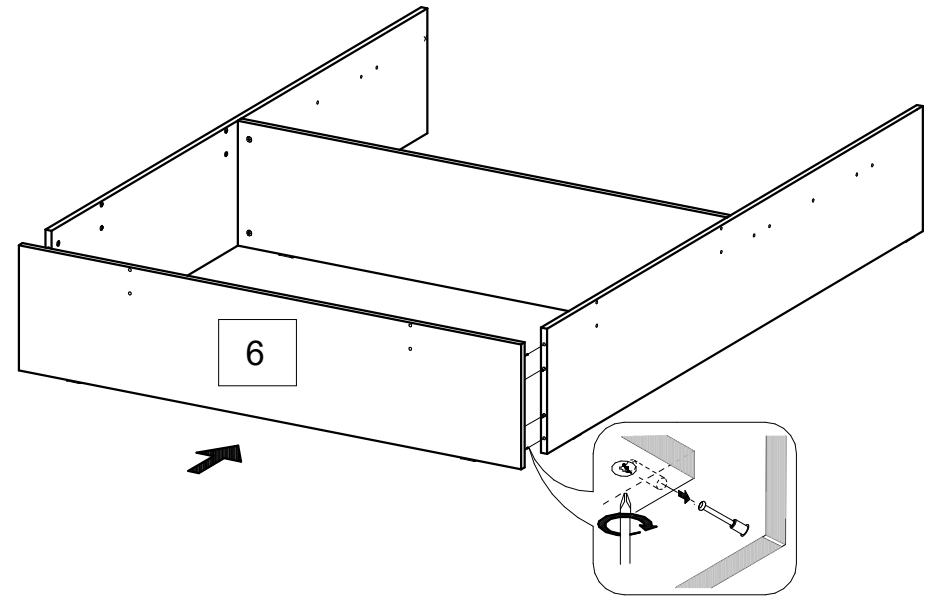



06

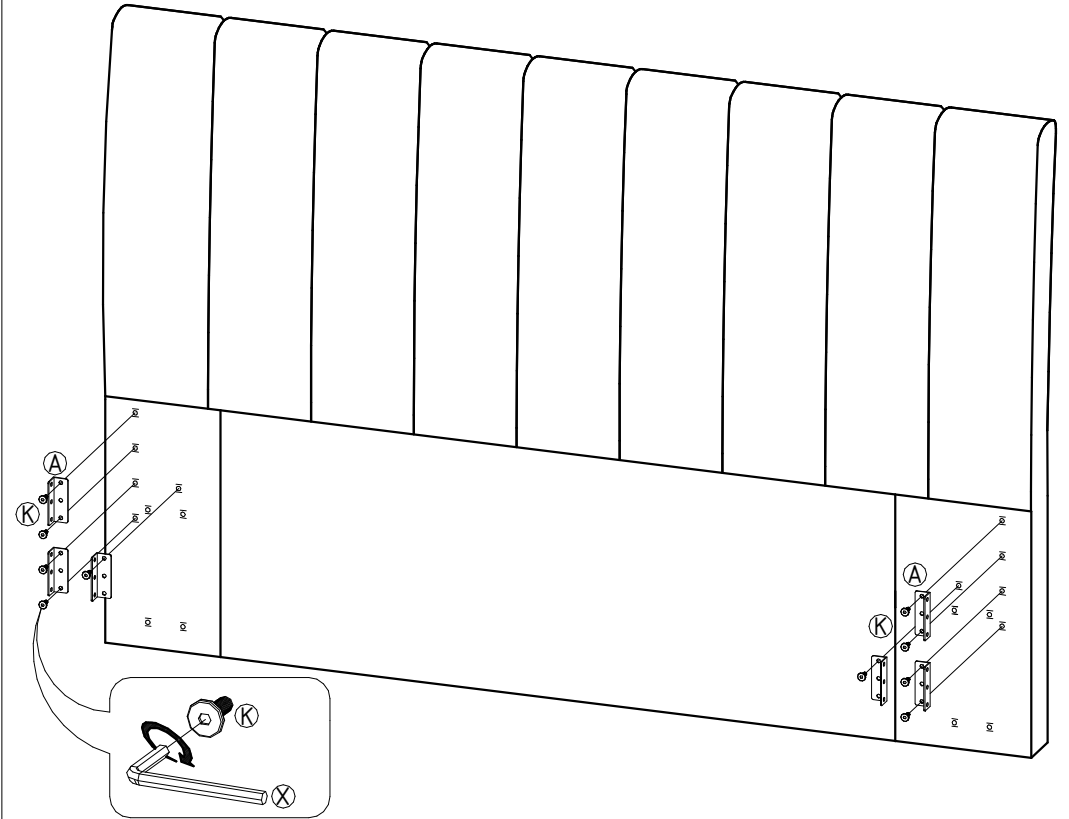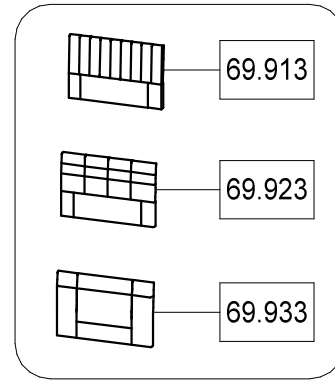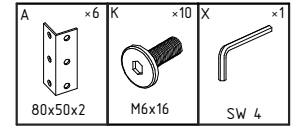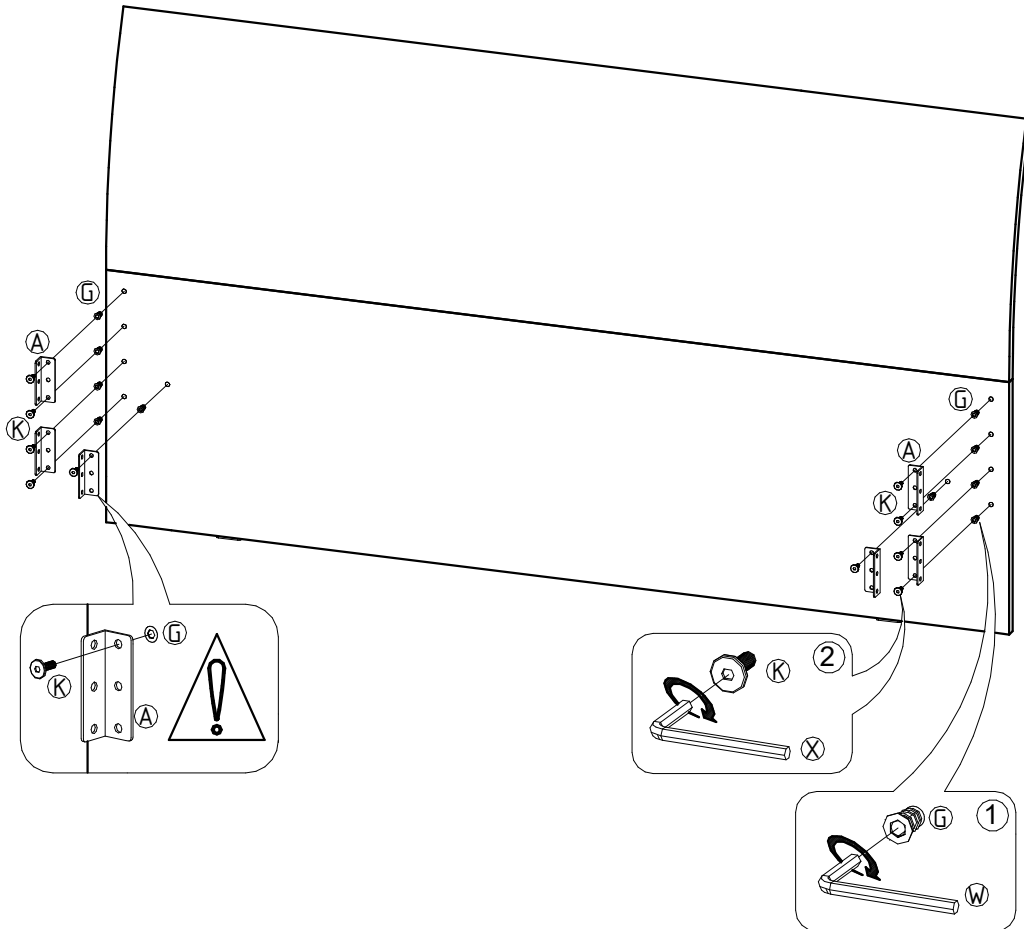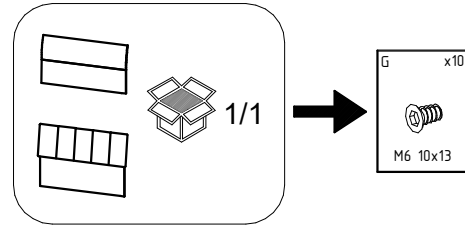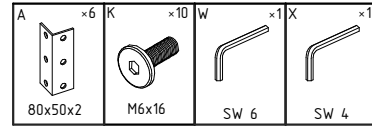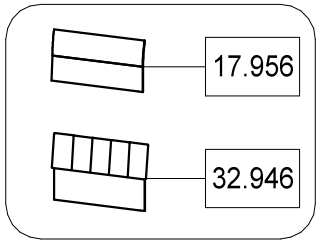



07

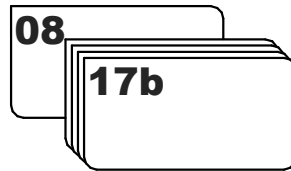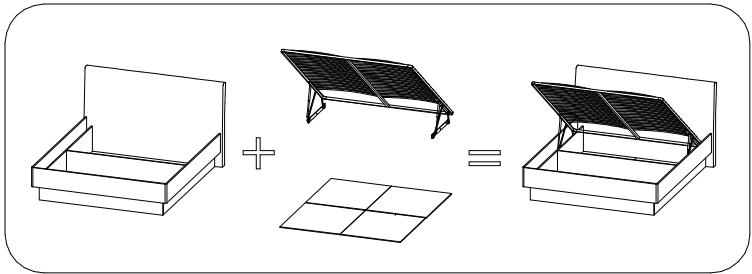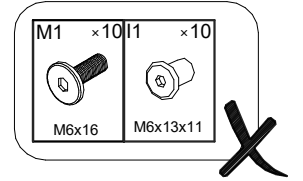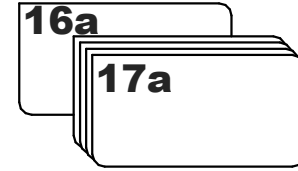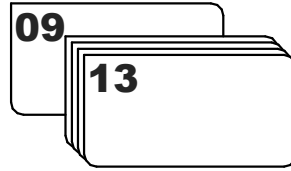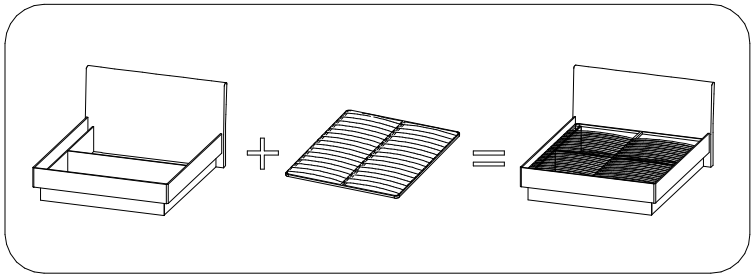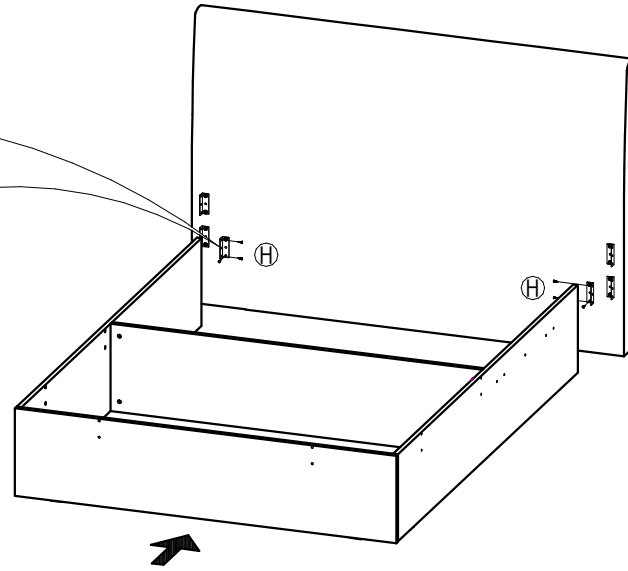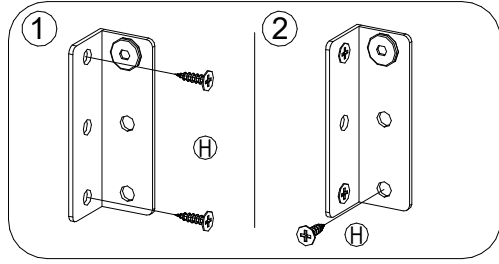

08

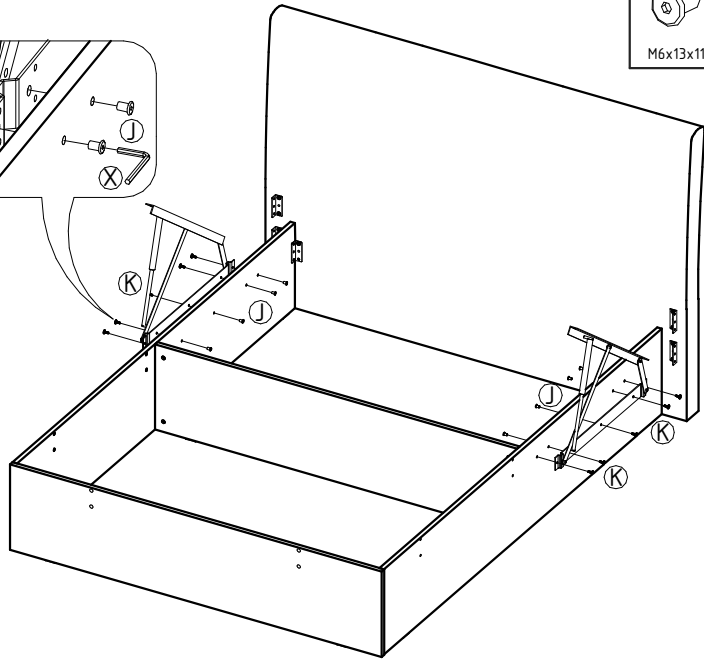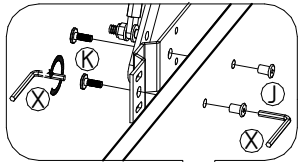


J	×10	K	×10	X	×2
M6x13x11		M6x16		SW 4	

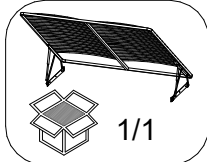

09

1 - 1


F	×2	G	×12	K	×4	W	×1	X	×1
80x61x52		M6 10x13		M6x16		SW 6		SW 4	

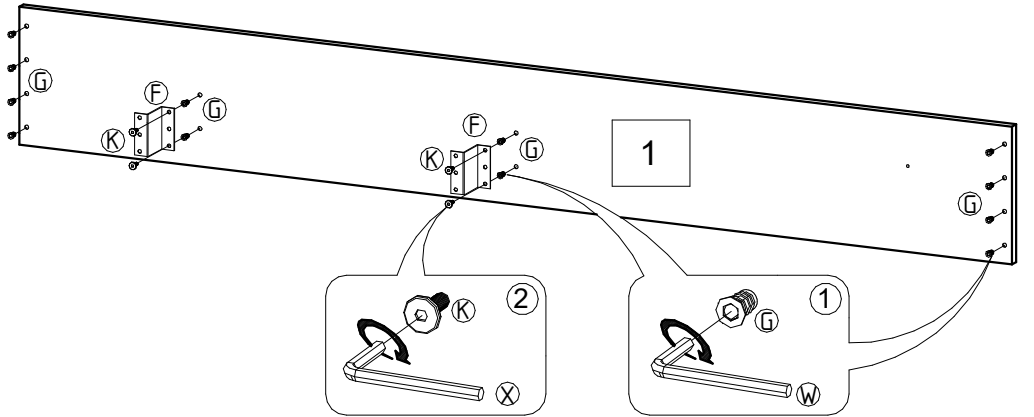

10

2 - 1

F	×2	G	×12	K	×4	W	×1	X	×1
80x61x52		M6 10x13		M6x16		SW 6		SW 4	

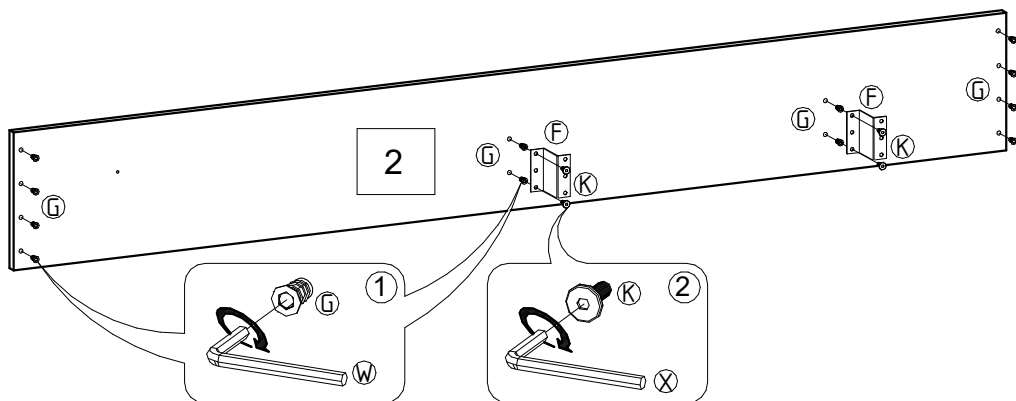


11

1 - 1

2 - 1


K	×16	X	×2
M6x16		SW 4	

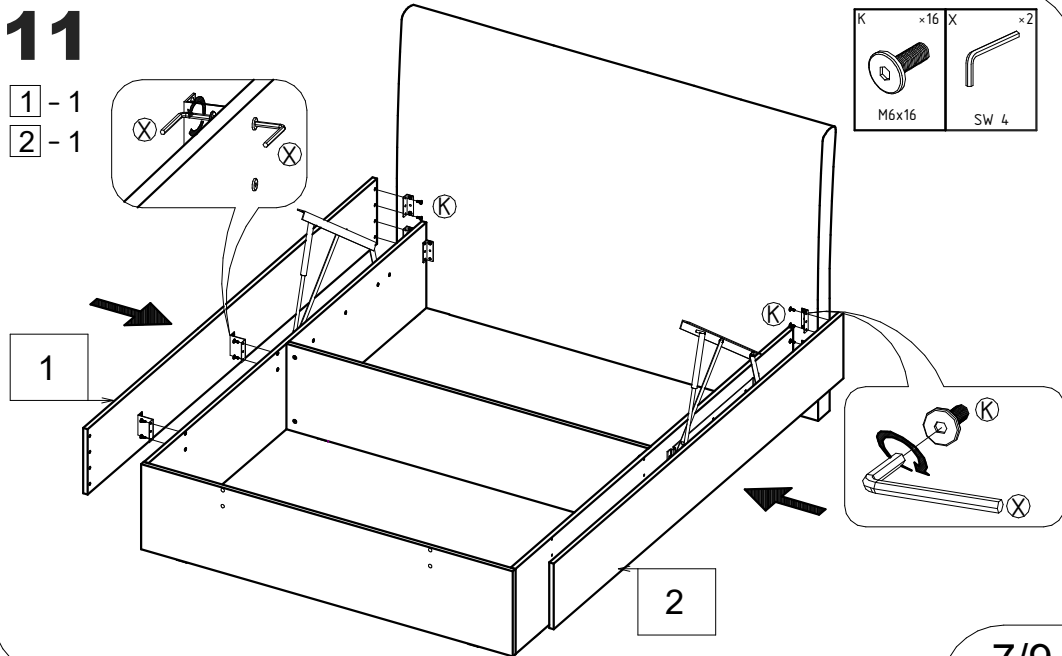

12

3 - 1


A	x4	F	x2	G	x12	K	x12	W	x1	X	x1
80x50x2		80x61x52		M6 10x13		M6x16		SW 6		SW 4	

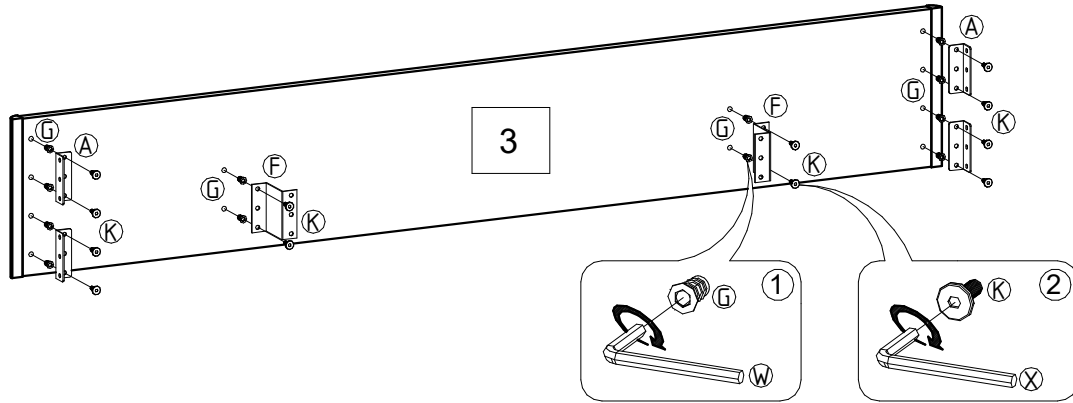

13



3 - 1

K	x12	X	x2
M6x16		SW 4	

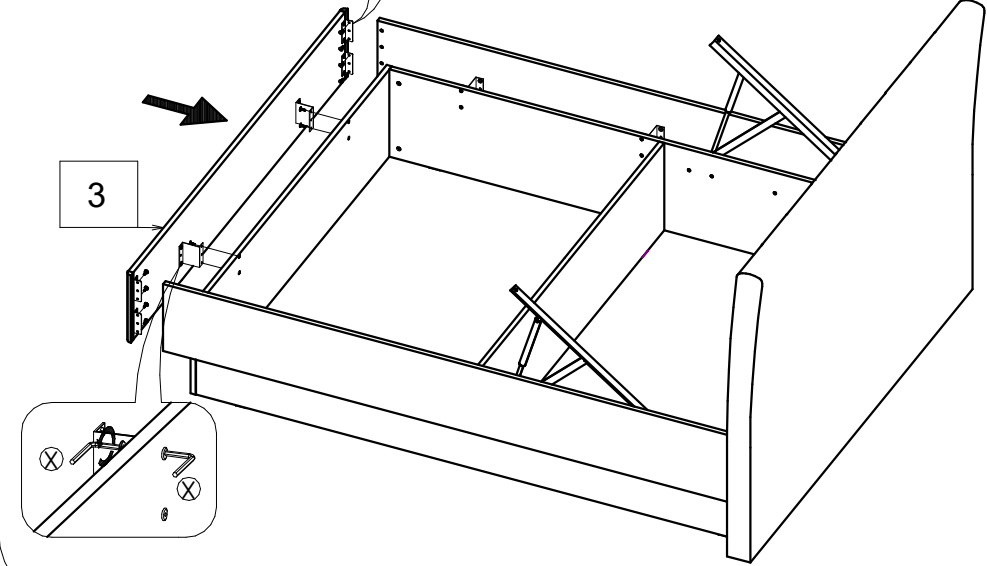


14



x4

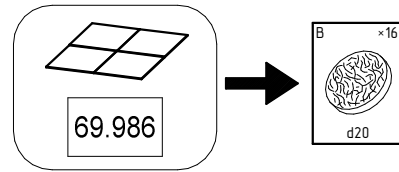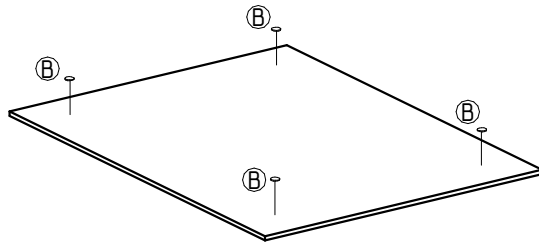


15

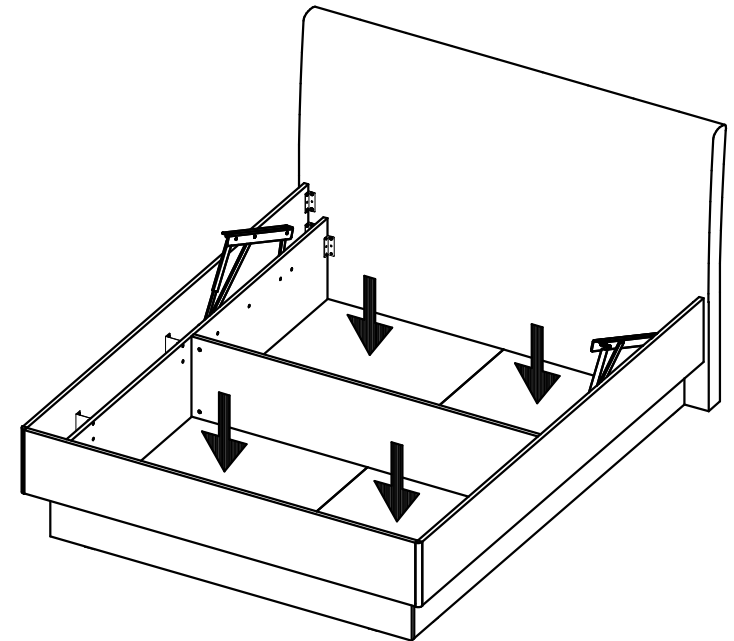



16a

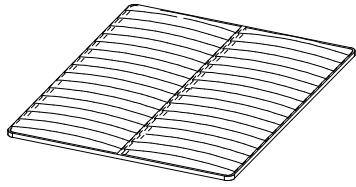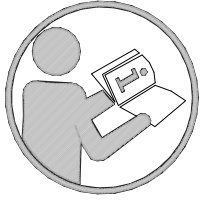

16b

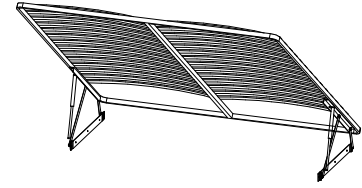

17a

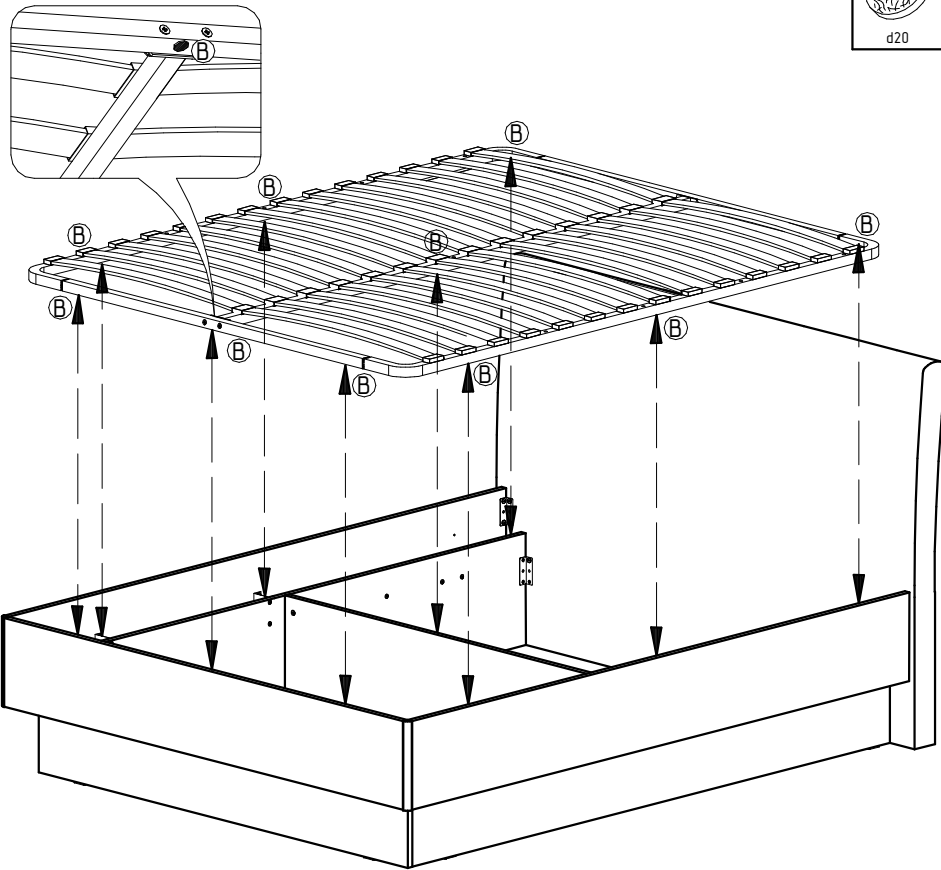

17b

